


压力传感器测量的各种压力形式：


PRESSURE (P_1) \geq VACUUM (P_0) \rightarrow ABSOLUTE PRESSURE SENSORS

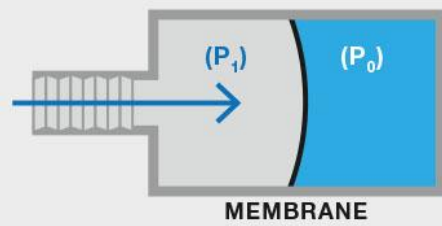

Absolute Pressure Sensors measure the pressure in comparison to the absolute vacuum P_0 .

绝对压力传感器 ($P_1 - P_0$ 是测量压力, P_0 是真空压力为零) 符号 **-A**


PRESSURE (P_1) \geq AMBIENT (P_{amb}) \rightarrow RELATIVE PRESSURE SENSORS

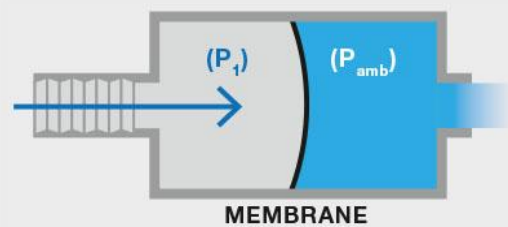

Relative Pressure Sensors measure the difference between the ambient pressure and the measuring pressure P_1 .

相对压力传感器 (表压, $P_1 - P_{amb}$ 是测量两边压力差值, P_{amb} 环境压力, 通常是大气压力, 其实就是差分压力传感器) 符号 **-G**


PRESSURE (P_1) \geq PRESSURE (P_2) \rightarrow DIFFERENCE PRESSURE SENSORS

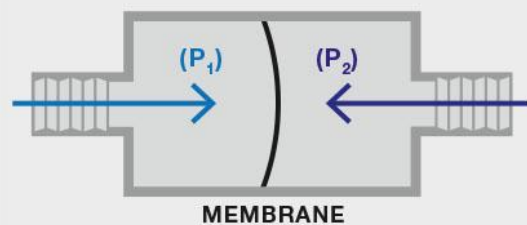

Difference Pressure Sensors measure the difference between two measuring pressures P_1 and P_2 .

差分压力传感器 ($P_1 - P_2$ 是测量两边的压力差值, 始终 $P_1 \geq P_2$) 符号 **-D**


PRESSURE (P_1) $\leq \geq$ PRESSURE (P_2) \rightarrow BIDIRECTIONAL PRESSURE SENSORS

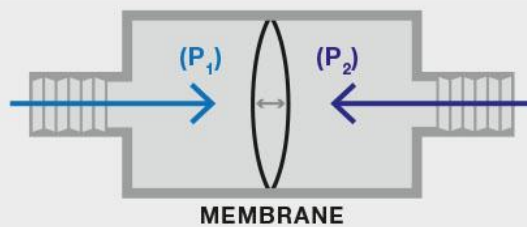

Bidirectional Difference Pressure Sensors measure the difference between two measuring pressures P_1 and P_2 , both as low- and high-pressure.

双向差分压力传感器 ($P_1 - P_2$ 是测量两边压力差值, P_1 可以大于也可以小于 P_2) 符号 **-D-B**

AIR-PRESSURE (P_{amb}) \geq VACUUM (P_0) \rightarrow BAROMETRIC PRESSURE SENSORS

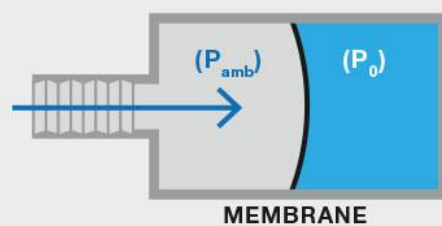

Barometric Pressure Sensors measure the air-pressure P_{amb} .

大气压力传感器 ($P_1 - P_0$ 是测量大气压力, P_0 是真空压力为零, 传感器校准范围在 **700-1200mbar**, 可以提高测量大气压力的精度) 符号 **-B**